


Float level

Check that the float has the actual weight which is marked on it, is undamaged and also free to rotate on its pivot pin.

Hold the carburettor cover vertically so that the float arm is in tight contact with the needle and with the spring in the needle not compressed.

In this position, check that both half-floats are at the correct distance from the float chamber cover measured to the topcover gasket fitted to it.

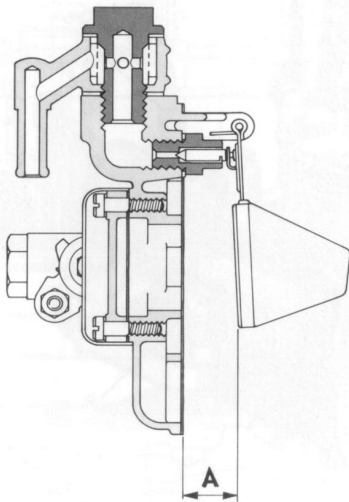

	float	A	
DHHLA {	7298.1	14,5 ÷ 15	MM
	7298.2	16,5 ÷ 17	MM
DHLB	7298.1	13 - 13.5	MM