

3.3 - Float level

Check that the weight of the float corresponds to specifications as shown on its body. Check also that it is not damaged and that it rotates freely on its pins. Hold the lid in the vertical position so that the float arm is in light contact with the needle.

In this position check that the two half-floats are at the specified height in relation to the float chamber lid with the gasket fitted in the normal position.

